# Installation Instruction



#### 

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- . Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- . For the installation: If you are unsure about the installation or maintenance of the luminaires, consult a gualified licensed electrician and check your local electrical code.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

### 


- Tum off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- All wiring connections should be capped with UL approved wire connectors.

#### A CAUTION

- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- Risk of burn. Disconnect power and allow fixture to cool before changing bulb or handing fixture.

NOTICE: Green ground screw provided in proper location.Do not relocate. NOTICE: Minimum 90°C supply conductors. NOTICE: Specifications and dimensions subject to change without notice. NOTICE: Suitable for Dry or Damp location

#### **General Wiring Diagram**

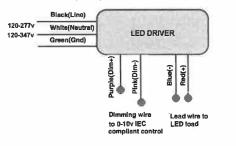



Where efficiency meets innovation. | www.earthtronics.com EarthTronics, Inc. 755 E Ellis Rd, Norton Shores, MI 49441 Toll Free: 866.632.7840 Email: contact@earthtronics.com

# Installation Instruction

& EarthTronics.

A: Chain Suspended Mounting

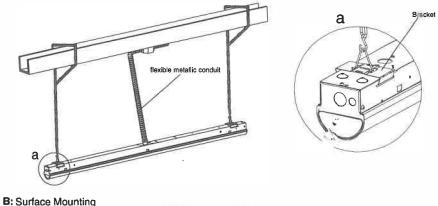

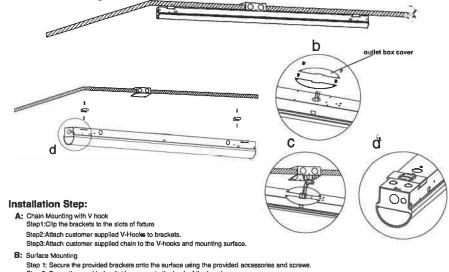


- Step 2: Screw the provided outlet box cover to the back of the housing.
- Step 3: Complete wiring to power supply in the junction box. Step 4: Clip the brackets to the slots of fixture.

Where efficiency meets innovation. | www.earthtronics.com

EarthTronics, Inc. 755 E Ellis Rd, Norton Shores, MI 49441 Toll Free: 866.632.7840 Email: contact@earthtronics.com

Earth Tronics.

### Field-Adjustable Wattage & CCT

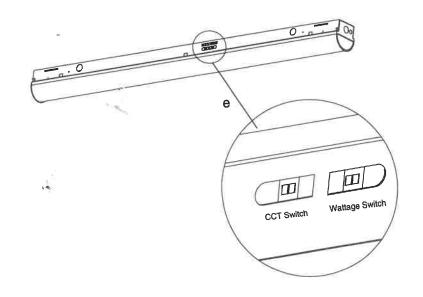

The end users may adjust the color temperature and lumen output respectively by the two DIP switch buttons integrated into the driver. Each DIP switch is accommodated with 3 options (left, middle and right ),corresponding to 3 color temperatures and 3 powers respectively, which can perform the desired color temperature and lumen output combination.

1.DIP switches are located on the side of the fixture.(see Fig.e)

2.Select a wattage and color temperature by sliding switch left or right respectively to the desired value.(see Fig.e)

Where efficiency meets innovation. | www.earthtronics.com

EarthTronics, Inc. 755 E Ellis Rd, Norton Shores, MI 49441 Toll Free: 866.632.7840 Email: contact@earthtronics.com